

# Installation Instructions


## RV Series

### IMPORTANT

Primex recommends the installation of Primex wall caps be carried out by a professional and to comply with all local building codes, standards and regulations.

### INSTALLATION INSTRUCTIONS

1. For intake vent use, remove the damper.
2. For use in dryer applications, use Primex "NS" (no screen) model products.
3. For steep roofs [slope > 55° (pitch 17/12 and greater)] use the Primex WC28 model.
4. Select an appropriate location for the roof vent between trusses. This roof vent is not recommended for flat roofs.
5. Create a roof vent opening corresponding to the size of the vent's duct size.
6. Attach the duct adaptor to the roof vent prior to positioning the roof vent into the opening. Ensure all four latches are snapped securely in place.
7. Insert the duct adaptor into the opening and align the top of the roof vent flange with the roofing material (see picture at right).
8. Use the mounting holes on the flange to fasten the base to roof decking.  
**IMPORTANT:** fasten only the top and side edges of the roof vent, allowing any trapped moisture to run out under the bottom of the flange
9. Install roofing material to cover the top and side flanges. The bottom flange rests on top of the roofing material as indicated in the picture to the right.

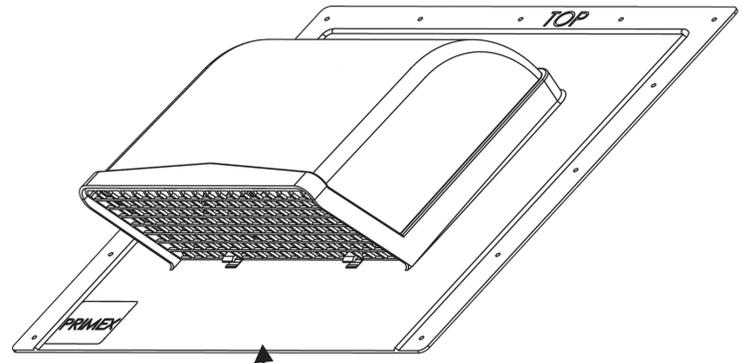

DO NOT NAIL ON THIS EDGE



RVL28 INSTALLED

#### CONTACT US FOR MORE INFORMATION:

1.604.881.7875 | info@primexvents.com

09/18

